

# PORTABLE AC/DC STANDARD METER

# **USER MANUAL**

# **PSM SERIES**





SHENZHEN HANGZHI PRECISION ELECTRONICS CO. LTD www.hangzhicn.com



# PORTABLE AC/DC STANDARD METER USER MANUAL

V2.2

Founded in 2017, Shenzhen Hangzhi Precision Electronics Co., Ltd. is a technology-leading enterprise dedicated to the development, production, sales and customization of high-precision current transducers and measuring instruments. We will strive to build a well-known brand of precision current transducers and precision instruments in the DC field, and become a leading international leader in precision electronics in the field of DC systems.

Based on multi-faceted technology integration and innovation, Shenzhen Hangzhi Precision Electronics Co., Ltd. has developed the industry's first high-precision digital current transducer and an analog current transducer featuring high precision, low costs, low zero drift and low temperature drift. This series of products reduces industry costs, improves industry efficiency, enhances user experience, and creates value for customers. The company's products have won many achievements in the national innovation and entrepreneurial competition, and won wide attention and support from all walks of life.

As a company with strong sense of responsibility and mission, we adhere to multi-point zero-flux technology-led approach, with client-oriented service and customized products, and improve the operating quality by successfully capital financing. We are making our efforts to build an innovative sharing enterprise.

## **Table of content**

Pref	ace		4
1.1	Pack	ring checklist	4
1.2	Acce	essories	5
1.3	Abou	ıt safety	5
1.4	Abou	ıt label	6
1.5	Abou	ut measurement level	7
1.6	Preca	autions for use	8
	1.6.1	Inspection before use	8
	1.6.2	Placement environment	8
	1.6.3	Placement method	9
	1.6.4	Use of the instrument	9
	1.6.5	Before connecting the power cord	9
	1.6.6	Before connecting the test cable	10
	1.6.7	Before turning on the power	10
	1.6.8	Before measurement	11
	1.6.9	Before connecting the communication cable	11
Sum	mary		12
2.1	Prod	uct summary	12
2.2	Prod	uct characteristics	12
2.3	Prod	uct composition	13
Prod	duct se	lection guide and technical parameters	15
3.1	Prod	uct selection	15
3.2	Tech	nical parameters	15
3.3	Phas	se and frequency	16
3.4	Harm	nonic measurement	17
3.5	Othe	r technical parameters	17
Instr	uctions	s for use	18
4.1	Steps	S	18
4.2	Instru	uctions of interface	18
	4.2.1	Boot interface	18
	4.2.2	Main interface	18
	4.2.3	AC measurement interface	19
	4.2.4	DC measurement interface	20
	4.2.5	Setting interface	22
	4.2.6	Power energy error	22
	4.2.7	Daily timing error interface	23
Con	nector	information	24
5.1	DB9	terminal definition (DB9 male)	24
5.2	Aviat	tion terminal definition	24
Dim	ension	S	25
Mair	ntenan	ce and service	26
	1.1 1.2 1.3 1.4 1.5 1.6 Sum 2.1 2.2 2.3 Proc 3.1 3.2 3.3 3.4 4.2 Con 5.1 5.2 Dime	1.1 Pack 1.2 Acce 1.3 About 1.4 About 1.5 About 1.6 Prec 1.6.1 1.6.2 1.6.3 1.6.4 1.6.5 1.6.6 1.6.7 1.6.8 1.6.9 Summary 2.1 Prod 2.2 Prod 2.3 Prod 2.2 Prod 2.3 Prod 3.1 Prod 3.2 Tech 3.3 Phas 3.4 Harm 3.5 Other Instructions 4.1 Step 4.2.1 4.2.2 4.2.3 4.2.4 4.2.5 4.2.6 4.2.7 Connector 5.1 DB9 5.2 Aviate Dimension	1.1 Packing checklist 1.2 Accessories 1.3 About safety 1.4 About label 1.5 About measurement level 1.6 Precautions for use 1.6.1 Inspection before use 1.6.2 Placement environment 1.6.3 Placement method 1.6.4 Use of the instrument 1.6.5 Before connecting the power cord 1.6.6 Before connecting the test cable 1.6.7 Before turning on the power 1.6.8 Before measurement 1.6.9 Before connecting the communication cable  Summary 2.1 Product summary 2.2 Product characteristics 2.3 Product composition Product selection guide and technical parameters 3.1 Product selection 3.2 Technical parameters 3.3 Phase and frequency 3.4 Harmonic measurement 3.5 Other technical parameters Instructions for use 4.1 Steps 4.2 Instructions of interface 4.2.1 Boot interface 4.2.2 Main interface 4.2.3 AC measurement interface 4.2.4 DC measurement interface 4.2.5 Setting interface 4.2.6 Power energy error 4.2.7 Daily timing error interface Connector information 5.1 DB9 terminal definition (DB9 male)

## SHENZHEN HANGZHI PRECISION ELECTRONICS CO. LTD

Add: Rm 531, Building B, Huayuan Hi-tech Innovation Park, Baoyuan Road, Bao'an District, Shenzhen, China P.R. Email: sales@hangzhicn.com Technical support: in

Email: sales@hangzhicn.com Technical support: info@hangzhicn.com Website: www.hangzhicn.com

7.1	Calibration and repair	26
7.2	Instrument transportation	26
7.3	Replacement of parts and life	26
	Cleaning	
	Frequently asked questions	
	ent 1 Communication agreement	
	ent 2 PSM600 pulse constant comparison table	
	ent 3 PSM1000 pulse constant comparison table	
	ent 4 PSM1500 pulse constant comparison table	

## SHENZHEN HANGZHI PRECISION ELECTRONICS CO. LTD

Add: Rm 531, Building B, Huayuan Hi-tech Innovation Park, Baoyuan Road, Bao'an District, Shenzhen, China P.R. Email: sales@hangzhicn.com Technical support: info@hangzhicn.com Telephone: +86(0)755-8259 3440

Website: www.hangzhicn.com

#### 1 Preface

Thank you for choosing HANGZHI "PSM Series Portable AC/DC Standard Meter". In order to make full and lasting use of this product, please keep the manual properly. HANGZHI PSM series portable AC/DC standard meter is referred as "this instrument" below.

## 1.1 Packing checklist

When this instrument is delivered to you, please check if any abnormalities or damages occur during transportation before using it. In particular, please pay attention to accessories, panel, keys and other items. In case of damage or failure to work, please contact the agent or HANGZHI service center.

Please keep the packaging material for delivery properly for future transportation.

Please make sure that the contents of the packing are correct.

Packing checklist					
Item Product photo		Specifications	Description		
□ This instrument	PATTICAL DECEMBERS WITH	See Part 3	Portable AC/DC standard meter		
□ User manual (This manual)		Soft copy or hard copy	To describe the operational method, specifications, etc.		
□ Power line		1.5 m/3*0.75 mm <sup>2</sup> Rated voltage: 250V Rated current: 10A	For power supply		
□ Voltage test line		1 m/2.5mm <sup>2</sup> Rated voltage: CATIII 1000V/CATIV 600V Rated current: 10A	To measure the voltage input signal		
□ Small current test line		1 m/2.5 mm <sup>2</sup> Rated current: 10A	To test small current input signal		
□ Power pulse line		1 m/5*0.3mm <sup>2</sup>	To connect power pulse input/output interface, clock pulse input interface		

Note:

Email: sales@hangzhicn.com Telephone: +86(0)755-8259 3440 Technical support: info@hangzhicn.com Website: www.hangzhicn.com

- 1) This instrument has been programmed when it was manufactured, and the latest version can be downloaded from the homepage of our company
- 2) Instructions for use in other languages are available at our website: http://www.hangzhicn.com/

### 1.2 Accessories

This instrument has the following options (to be sold separately). Please contact the agent or sales center if you need purchase.

Option list				
Item	Product photo	Specifications	Description	
□ USB to RS232 connection line		1.8 m/USB2.0/RS232	It can be used to transfer PC interface from USB2.0 to RS232.	
□ RS232 connection line	8	2 m/3*0.3mm <sup>2</sup> DB9 Female to female/23 connection line	It can be used to connect between RS232 and communication interface of this device.	
□ USB to RS485 connection line		1.5 m/USB2.0/RS485	It can be used to transfer PC interface from USB2.0 to RS485.	
□ RS485 connection line		0.1 m/2*0.3mm <sup>2</sup> DB9 Female to female	It can be used to connect between RS485 and communication interface of this device.	
□ USB extension line		2.0 m/USB2.0/ Male to male	It can be used for LCD screen program upgrade.	
□ AC adapter		For overseas usage	Power adapter for different countries.	

# 1.3 About safety

The instrument is designed and tested in accordance with IEC61010 safety specifications, and is shipped in a safe state. In addition, failure to comply with the instructions may damage the functions provided by the instrument to ensure safety. Before using this instrument, please read carefully the following safety-related matters.

#### SHENZHEN HANGZHI PRECISION ELECTRONICS CO. LTD

Telephone: +86(0)755-8259 3440 Webs

Technical support: info@hangzhicn.com Website: www.hangzhicn.com

# **\_\_\_\_**Danger



If wrong method is used, it may lead to personal accident and instrument failure. Read the instructions carefully and operate after fully understanding the contents.

# **⚠**Warning



It includes electrical hazards such as electric shock, heating, fire and arc discharge caused by short circuit. Personnel who first use electrical measuring instruments should use them under the supervision of senior electrical measuring personnel.

## 1.4 About label

This manual classifies and marks the severity and risk levels of risks as follows.

	•
⚠ Danger	A dangerous situation that is highly likely to cause death or serious injury to the operator is described.
⚠ Warning	Situations that are likely to result in death or serious injury to the operator are described.
⚠ Note	Conditions that may result in minor injury to the operator or expected damage or malfunction of the instrument are described.
Important matters	Information or content regarding operations and maintenance work that must be known in advance are described.
/4\	An indication of high voltage hazard is used to warn the risk of shock, burns and even death from electric shock due to neglection in safety confirmation or misuse.
0	Prohibited behavior is indicated.
0	The "mandatory" matter which must be performed is indicated.

## Symbols on the instrument


<u> </u>	To indicated caution or danger. When the symbol is displayed on the instrument, please refer to the corresponding position in the instruction manual.		
ᆣ	To indicate the ground terminal.		
	To denote direct current (DC).		
~	To denote alternate current (AC).		
I	To denote power "ON".		
0	To denote power "OFF".		

#### SHENZHEN HANGZHI PRECISION ELECTRONICS CO. LTD

Add: Rm 531, Building B, Huayuan Hi-tech Innovation Park, Baoyuan Road, Bao'an District, Shenzhen, China P.R.

Email: sales@hangzhicn.com Technical support: info@hangzhicn.com Website: www.hangzhicn.com

## Symbols related to standard

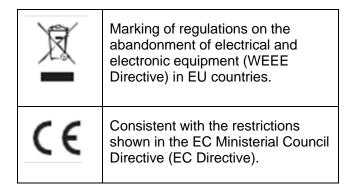

#### 1.5 About measurement level

In order to use the measuring instrument safely, IEC61010 classifies the measurement into three safety levels of CAT II to CAT IV according to the places of use.


# ⚠ Danger



- Using a measuring instrument with a small classification level in a large numerical level may cause major accidents, so please avoid this situation absolutely
- Using a measuring instrument without a classification mark to measure CAT II to CAT IV may lead to major accidents, so please avoid this situation absolutely

This instrument is suitable for CAT III 1000 V.

- CAT II: The primary side circuit of an instrument (movable tool, household appliance, etc.) with a power cord that connects to the outlet, when the socket is directly measured.
- CAT III: Measuring the primary side circuit of an instrument (fixed device) that is directly powered from the switchboard, and the circuit from the switchboard to the outlet.

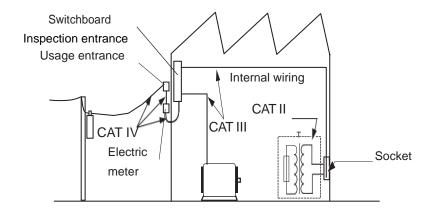

#### SHENZHEN HANGZHI PRECISION ELECTRONICS CO. LTD

Add: Rm 531, Building B, Huayuan Hi-tech Innovation Park, Baoyuan Road, Bao'an District, Shenzhen, China P.R. Email: sales@hangzhicn.com Technical support: ir

Telephone: +86(0)755-8259 3440

Technical support: info@hangzhicn.com Website: www.hangzhicn.com

## 1.6 Precautions for use

In order to use the instrument safely and make full use of its functions, please observe the following precautions.

## 1.6.1 Inspection before use

# **Marning**




- •If the test cable or the instrument is damaged, it may cause electric shock. Be sure to do the following checks before using it.
- •Before using it, please confirm that there are no problems caused by storage and transportation, and use it after checking and confirming the operation. If it is confirmed to be faulty, please contact the agent or the company after-sales center.
- •The outer surface of the power cord damage or exposure may cause an electric shock or short circuit accident. Please do not use, and contact your dealer or company after-sales center
- •The outer skin of the cable damage or metal exposure may cause short circuit or electric shock. Please replace with a device that is not damaged.
- •Check whether the instrument is damaged. If it is damaged, please send it for repair.
- •When the power is turned on and the start button is lit red, the power cord may be broken or a malfunction occur inside the instrument. Please send it for repair.
- •After the end of the test (displaying the company LOGO), if the main measurement function screen is not displayed, a malfunction may occur inside the instrument. Please send it for repair.

#### 1.6.2 Placement environment

# 

Please do not place the instrument in the following places, otherwise it will cause malfunction or accident of the instrument.

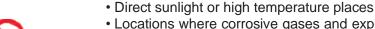

- Locations where corrosive gases and explosive gases are generated
- Places where strong electromagnetic waves are generated or near charged objects
- Close to induction heating device (high frequency induction heating device, IH induction cooker, etc.)
- Locations where mechanical vibrations are frequent
- · Locations affected by water, oil, chemicals and solvents
- Wet, dew condensation
- · A place with a lot of dust

#### SHENZHEN HANGZHI PRECISION ELECTRONICS CO. LTD

Add: Rm 531, Building B, Huayuan Hi-tech Innovation Park, Baoyuan Road, Bao'an District, Shenzhen, China P.R.


#### 1.6.3 Placement method

# Marning



Please do not place on unstable pedestals or in inclined places. Otherwise, personal injury or malfunction of the main unit may occur due to falling or tipping over.

- Place the bottom side down.
- In order to prevent the temperature of the instrument from rising, please be sure to keep a specified distance from the surroundings when placing it.

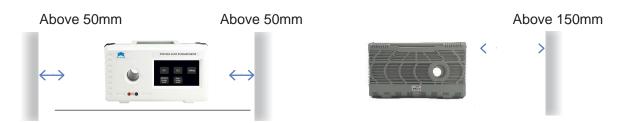

The means to cut off the power supply of this instrument is to unplug the power cord. In case of emergency, the power cord can be unplugged to cut off the power supply immediately, so please make sure that there is enough space for operation.

#### 1.6.4 Use of the instrument

# <u>∧</u>Danger



To prevent an electric shock, never remove the main unit casing, since there are high voltage and high temperature parts inside.

# **∆**Note



In order to prevent damage to the instrument, please avoid vibration and collision during handling and use, and pay attention to collisions caused by falling.

# 1.6.5 Before connecting the power cord

# **⚠**Warning



To avoid electric shock and to ensure the safety of this instrument, please connect the supplied power cord to a three-phase outlet.

#### SHENZHEN HANGZHI PRECISION ELECTRONICS CO. LTD

Add: Rm 531, Building B, Huayuan Hi-tech Innovation Park, Baoyuan Road, Bao'an District, Shenzhen, China P.R.

Email: sales@hangzhicn.com Telephone: +86(0)755-8259 3440 W

Technical support: info@hangzhicn.com Website: www.hangzhicn.com )

## 1.6.6 Before connecting the test cable

# <u>↑</u>Danger



Be sure to connect the test cable to the secondary side of the circuit breaker. Even if a short circuit occurs on the secondary side of the circuit breaker, the short circuit current is cut by the circuit breaker. The current capacity on the primary side is very large, and in the event of a short circuit accident, damage to the instrument or equipment may occur.

# **Marning**



To avoid electric shock and short circuit accidents, please use the specified test cable.

## 1.6.7 Before turning on the power

# **⚠**Warning



Before turning on the power, please confirm whether the power voltage listed on the power connection of the instrument and the one you are using are consistent.

Using the power supply voltage outside the specified range may cause instrument damaged or an electrical accident.

# Mote



Do not use UPS and DC-AC inverters with square wave or approximate sine wave output to drive this instrument to avoid damage to this instrument.

#### SHENZHEN HANGZHI PRECISION ELECTRONICS CO. LTD

Add: Rm 531, Building B, Huayuan Hi-tech Innovation Park,
Baoyuan Road, Bao'an District, Shenzhen, China P.R.
Email: sales@hangzhicn.com Technical support: info@hangzhicn.com
Telephone: +86(0)755-8259 3440 Website: www.hangzhicn.com

#### 1.6.8 Before measurement

When measuring voltage

# <u>∧</u>Danger

 The maximum in-phase voltage of the voltage measurement terminal is as follows.

CAT II: AC/DC 300 V

Without measurement classification: AC/DC 800 V



Exceedance of this voltage may cause damage to the instrument or cause personal injury.

• The maximum input voltage of the voltage measurement terminal is DC 1000 V and 1100 V peak.

When the voltage exceeds 800V, it can be measured only when the object to be tested is insulated from the ground. Exceedance of this voltage may cause damage to the instrument or personal injury.

•To prevent an electric shock, do not use the test cable tip to avoid short circuit in the voltage-applied circuit.

## 1.6.9 Before connecting the communication cable

## ∧Note



When connecting or removing the communication cable, please be sure to turn off the power of the instrument and the connected device. Failure to do so may result in false action or malfunction.

## 2 Summary

## 2.1 Product summary

PSM series portable AC/DC standard meter is a new generation of standard meter produced by our company. The product adopts a new software and hardware design, which can simultaneously measure single-phase AC and DC voltage, current, frequency, phase, active power, reactive power, inspecting power, power factor, active energy, and reactive energy etc., at the same time, high-order harmonic distortion (up to 63 harmonics) can be measured. It can be widely used in metrology research institutes, government inspection agencies and other metrology fields for the metrological verification of single-phase AC and DC voltmeters, ammeters, electric energy meters and power meters.

## 2.2 Product characteristics

- ➤ To measure single-phase AC and DC voltage, current, frequency, phase, active power, reactive power, inspecting power, power factor, active energy, and reactive energy etc.
- To detect power error and daily timing error
- To perform electric energy word test
- ➤ Ripple test can be performed to detect AC ripple below 1 kHz
- ➤ To measure the distortion of voltage and current, perform 2~63 harmonic analysis, display real-time harmonic components, harmonic content, harmonic distortion, etc.
- ➤ Equipped with energy pulse input interface which can be used for real-time verification of various active energy meters, reactive energy meters, etc.
- Equipped with standard energy pulse output interface for automatic setting of pulse constant
- Equipped with RS232, RS485 and optional CAN communication interfaces, and it can communicate directly with PC
- Multi-range can be switched automatically for voltage and current, and 110% of measuring range limit can be reached
- > Equipped with product program online upgrade function

# 2.3 Product composition



1	Company logo	Company logo
2	Product model	The model and name of the corresponding product
3	Current measuring hole	Perforation in the specified direction when measuring large current
4	Small current measuring terminal	Terminals that are directly inserted during small current measurement, with red terminal connected to current input, and black terminal connected to current output.
5	Display area	For user interaction, to display measurement data, parameter settings, etc.



6	Vents	For body cooling
---	-------	------------------

## SHENZHEN HANGZHI PRECISION ELECTRONICS CO. LTD

Add: Rm 531, Building B, Huayuan Hi-tech Innovation Park, Baoyuan Road, Bao'an District, Shenzhen, China P.R.

## Left



7	DB9 interface	Used for RS232, RS485, CAN communication
8	USB interface	Used for display program upgrade
9	Aviation interface	For pulse input and output
10	Product serial number	The unique serial number of the product
11	Manufacturing nameplate	For management purpose, please don't peel off.
12	Ground terminal	Used to connect to the ground when using this instrument



		Terminals that are directly inserted during voltage measurement, with red terminal connected to positive voltage, and black terminal connected to negative voltage.
14	Power input and main power	To connect power and for ON/OFF of the main
	switch	power
15	Fan hole	For body cooling

## SHENZHEN HANGZHI PRECISION ELECTRONICS CO. LTD

Add: Rm 531, Building B, Huayuan Hi-tech Innovation Park, Baoyuan Road, Bao'an District, Shenzhen, China P.R. Email: sales@hangzhicn.com Technical support: in

# 3 Product selection guide and technical parameters

## 3.1 Product selection

PSM Series Product Selection			
PSM600-E PSM1000-E PSM1500-E			
DC Voltage Measurement (DCV)	20V~1000V	20V~1000V	20V~1000V
DC Current Measurement (DCI)	500mA~600A	1A~1000A	75A~1500A
AC Voltage Measurement (ACV)	30V~707V	30V~707V	30V~707V
AC Current Measurement (ACI)	500mA~424A	1A~707A	50A~1000A

## 3.2 Technical parameters

		PSM600-E	PSM1000-E
	Measuring Limit	600A	1000A
DC Current	Measuring Range	(0~110%)RG	(0~110%)RG
DC Current	Accuracy	±0.02%RD(500mA≤I≤600A)	±0.02%RD(1A≤I≤1000A)
	Resolution	0.002%RD(500mA≤l≤600A)	0.002%RD(1A≤I≤1000A)
	Measuring Limit	1000V	1000V
DC Voltage	Measuring Range	(0~110%)RG	(0~110%)RG
DC Voltage	Accuracy	±0.02%RD(20V≤U≤1000V)	±0.02%RD(20V≤U≤1000V)
	Resolution	0.002%RD(20V≤U≤1000V)	0.002%RD(20V≤U≤1000V)
	Measuring Limit	424A	707A
AC Current	Measuring Range	(0~110%)RG	(0~110%)RG
AC Current	Accuracy	±0.05%RD(500mA≤I≤424A)	±0.05%RD(1A≤I≤707A)
	Resolution	0.005%RD(500mA≤l≤424A)	0.005%RD(1A≤I≤707A)
	Measuring Limit	707V	707V
AC Voltage	Measuring Range	(0~110%)RG	(0~110%)RG
AC Voltage	Accuracy	±0.05%RD(30V≤U≤707V)	±0.05%RD(30V≤U≤707V)
	Resolution	0.005%RD(30V≤U≤707V)	0.005%RD(30V≤U≤707V)
DC power/		±0.02%RD	±0.02%RD
Electric Energy	Accuracy	(20V≤U≤1000V, 500mA≤I≤600A)	(20V≤U≤1000V, 1A≤I≤1000A)
AC power/	A	±0.05%RD	±0.05%RD
Electric Energy	Accuracy	(30V≤U≤707V, 500mA≤I≤424A)	(30V≤U≤707V, 1A≤I≤707A)

Note: RD denotes reading value, RG denotes measuring range value (The same below).

Email: sales@hangzhicn.com Technical support: info@hangzhicn.com Website: www.hangzhicn.com

		PSM1500	
	Measuring Limit	1500A	
DC Current	Measuring Range	(0~110%)RG	
	Accuracy	±0.02%RD(75A≤I≤1500A)	
	Resolution	0.002%RD(75A≤I≤1500A)	
	Measuring Limit	1000V	
DC Voltage	Measuring Range	(0~110%)RG	
	Accuracy	±0.02%RD(20V≤U≤1000V)	
	Resolution	0.002%RD(20V≤U≤1000V)	
	Measuring Limit	1000A	
AC Current	Measuring Range	(0~110%)RG	
	Accuracy	±0.05%RD(50A≤I≤1000A)	
	Resolution	0.005%RD(50A≤I≤1000A)	
	Measuring Limit	707V	
AC Voltage	Measuring Range	(0~110%)RG	
	Accuracy	±0.05%RD(30V≤U≤707V)	
	Resolution	0.005%RD(30V≤U≤707V)	
DC power/Flectric Energy	Accuracy	±0.02%RD	
DC power/Electric Energy	Accuracy	(20V≤U≤1000V, 75A≤I≤1500A)	
AC power/Electric Energy	Accuracy	±0.05%RD	
7.0 power/Lieutilo Lilergy	Accuracy	(30V≤U≤707V, 50A≤I≤1000A)	

# 3.3 Phase and frequency

Te	Technical parameters of phase and frequency						
Phase	Measuring range	0.000°~359.999°					
measurement	Accuracy	±0.02°					
	Resolution	0.001°					
Frequency	Measuring range	40Hz~70Hz					
measurement	Accuracy	±0.01Hz					
	Resolution	0.001Hz					

Add: Rm 531, Building B, Huayuan Hi-tech Innovation Park, Baoyuan Road, Bao'an District, Shenzhen, China P.R.

Email: sales@hangzhicn.com
Telephone: +86(0)755-8259 3440
Technical support: info@hangzhicn.com
Website: www.hangzhicn.com

## 3.4 Harmonic measurement

	Allowable error of h	armonic measureme	nt
Grade	To be measured	Condition	Allowable error
	Voltage	$U_b \geq 1\% U_N$	5% <i>U</i> <sub>b</sub>
A	-	$U_b < 1\% U_N$	$0.05\%U_N$
	Current	$I_b \ge 3\%I_N$	5%I <sub>b</sub>
		$I_b < 3\%I_N$	$0.15\%I_N$

Note:  $U_N$  denotes nominal voltage,  $U_b$  denotes harmonic voltage,  $I_N$  denotes rated current,  $I_b$  denotes harmonic current.

## 3.5 Other technical parameters

	Other technical parameters
	Power pulse output parameter (r/kwh) can be set from 1 to 2,000,000,000, and the maximum pulse frequency is 160kHz.
Power pulse output	The power pulse is a TTL/CMOS compatible level output with a load capacity greater than 20 mA.
	The default pulse output frequency is 0.2Hz~160KHz.
Barrataire	The calibration of the energy meter pulse constant (r/kWh) is set from 1 to 2,000,000,000.
Power pulse input	The setting range of the check circle is from 1 to 999,999,999.
	The maximum received pulse frequency is 50 kHz
	Clock frequency (Hz) setting range is from 0.01 to 50,000.00.
Daily timing pulse input	The setting range of the check circle is from 1 to 999,999,999.
	The maximum received pulse frequency is 50kHz.
Working power voltage range	AC85V~265V, 50/60Hz
Power consumption	<30VA
Preheat time	≤30 minutes
Working temperature	10℃~35℃
Relative humidity	≤85%, Non-corrosive gas
Dimensions	Around 373mm×211.5mm×131.5mm (Length× Width× Depth) (No protrusions)
Weight	5.5kg

#### SHENZHEN HANGZHI PRECISION ELECTRONICS CO. LTD

### 4 Instructions for use


## 4.1 Steps

- 1) Place the instrument
- 2) Check before measurement
- 3) Connect the power cord
- 4) Connect the test cable
- 5) Turn on the power
- 6) Start measuring
- 7) Record data
- 8) Measurement completed

## 4.2 Instructions of interface (For reference only, subject to delivery)

#### 4.2.1 Boot interface

The boot interface is displayed within 1-2 seconds after the power is turned on, and the boot interface is as shown below.

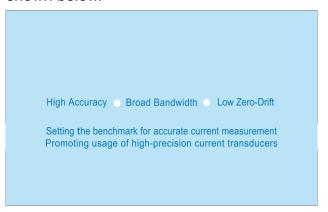

#### 4.2.2 Main interface

After the boot screen, the main screen as shown below will appear. The main interface has a total of 5 buttons, which are AC, DC, settings, electrical energy error and daily timing error.



#### SHENZHEN HANGZHI PRECISION ELECTRONICS CO. LTD

Telephone: +86(0)755-8259 3440

Technical support: info@hangzhicn.com Website: www.hangzhicn.com


#### 4.2.3 AC measurement interface

After clicking the "AC" button on the main interface, the AC measurement interface as shown below will appear. The AC interface can display voltage, current, frequency, phase, and active power.



Click "Heavy current" or "10A" to select corresponding gear while "Heavy current" can be used in direct perforation measurement, "10A" can be used when accessing 10A small current.


Click the "Word test" to enter the AC word test interface.

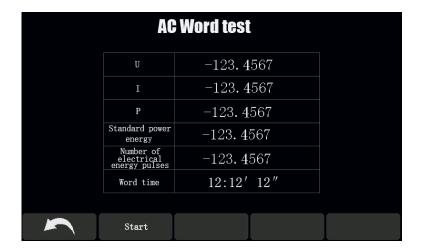

Telephone: +86(0)755-8259 3440 Web


Technical support: info@hangzhicn.com Website: www.hangzhicn.com

Click "Harmonic analysis" to enter harmonic analysis interface.

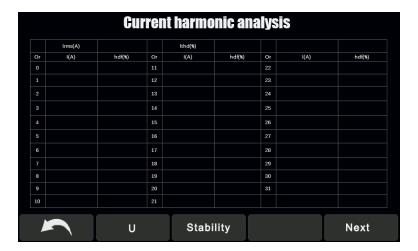


## 4.2.4 DC measurement interface

After clicking the "DC" button on the main interface, the DC measurement interface as shown below will appear. The DC interface can display voltage, current and power.

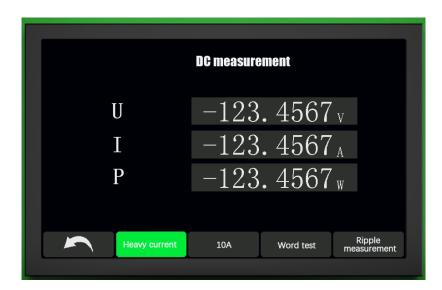

Email: sales@hangzhicn.com Technica Telephone: +86(0)755-8259 3440 Website:

Technical support: info@hangzhicn.com Website: www.hangzhicn.com Click "Heavy current" or "10A" to select corresponding gear while "Heavy current" can be used in direct perforation measurement, "10A" can be used when accessing 10A small current.

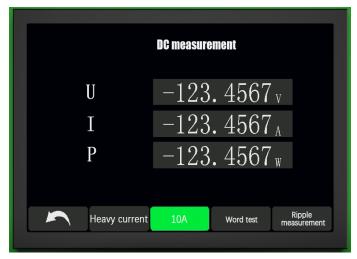

Click the "Word test" to enter the DC word test interface.

DC Word test					
Ū	-123. 4567				
I	-123. 4567				
P	-123. 4567				
Standard power energy	-123. 4567				
Number of electrical energy pulses	-123. 4567				
Word time	12:12′ 12″				
Start					

Click the "Ripple measurement" to enter the ripple measurement interface.

Ripple measurement							
	Amplitude	Ripple effective value					
U	−123. 4567 V	−123. 4567 V					
Ι	−123. 4567 Å	−123. 4567 A					

#### SHENZHEN HANGZHI PRECISION ELECTRONICS CO. LTD

Add: Rm 531, Building B, Huayuan Hi-tech Innovation Park, Baoyuan Road, Bao'an District, Shenzhen, China P.R.

# 4.2.5 Setting interface

Click "Setting" to enter setting interface as shown below. In the setting interface, you can use calibration function and view information such as software version etc.



## 4.2.6 Power energy error


Click "Power energy error" to enter power energy error interface.



Telephone: +86(0)755-8259 3440

Technical support: info@hangzhicn.com Website: www.hangzhicn.com

Click "DC" to enter DC power energy error interface.

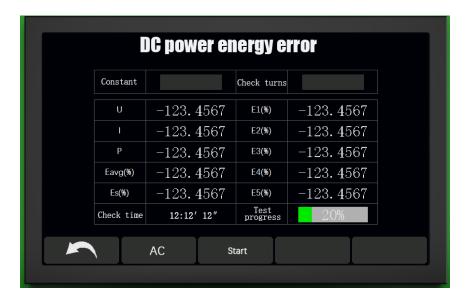

# 4.2.7 Daily timing error interface

Click "Daily timing error interface" to enter daily timing error interface interface.



Email: sales@hangzhicn.com Tech Telephone: +86(0)755-8259 3440 Webs

Technical support: info@hangzhicn.com Website: www.hangzhicn.com



## 5 Connector information

# 5.1 DB9 terminal definition (DB9 male)

Pin	Definition	Description	Connector picture
1	RS485_B	RS485 communication B	
2	RS232_RX	RS232 transmission	1
3	RS232_TX	RS232 reception	
4	RS485_ A	RS485 communication A	
5	GND	RS485/RS232 isolated	
6	CAN_L	CAN communication L	
7	CAN_G	CAN communication isolation	6_ 9
8	CAN_H	CAN communication H	
9	N.C	Not connected	

## 5.2 Aviation terminal definition

Pin	Definition	Connection line color	Description	Connector picture
1	+5V	Red	For power supply	
2	PULSE_OUT_CH1	Green	Output channel 1, power pulse	15
3	PULSE_IN_CH1	Yellow	Input channel 1, power pulse / Daily timing frequency	2 0 0 4
4	PULSE_IN_CH2	White	Not used	
5	GND	Black	Ground	


Note: The +5V power supply is the module that supplies power to external passive devices.


Email: sales@hangzhicn.com Technical support: info@hangzhicn.com Website: www.hangzhicn.com





## 6 Dimensions


Unit: mm, if not specified, the dimensional deviation is ±2mm or 1%, whichever is greater.

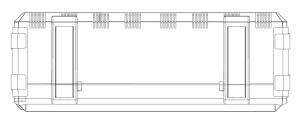

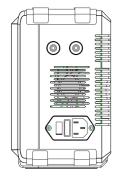

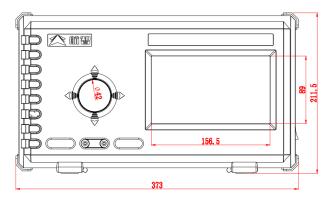

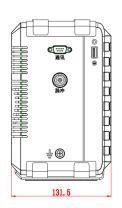

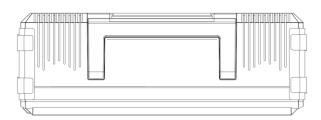

Email: sales@hangzhicn.com Telephone: +86(0)755-8259 3440 Technical support: info@hangzhicn.com Website: www.hangzhicn.com

#### 7 Maintenance and service

# Warning

Please do not modify, disassemble or repair the instrument. Failure to do so may result in fire, electric shock, or personal injury.

## 7.1 Calibration and repair

- •The calibration period varies depending on the customer's usage or environment. It is recommended to determine the calibration period based on the customer's usage or environment, and commission our company to make regular corrections.
- When commissioning our company to perform calibration or repair of the instrument, the settings will be restored to the initial state.

## 7.2 Instrument transportation

- For safe transportation of the product, please use the box and cushioning material at the time of purchase. If the package is damaged/deformed and the cushioning material is flattened, please do not use it and contact the dealer or the service center.
- If the original package and cushioning materials are not used during transportation and lead to damage, the repair costs will be incurred even if the product is within warranty period.
- When sealing the instrument, be sure to unplug the cable from the unit.
- Be careful not to drop the instrument or subject to severe collisions during transport.

## 7.3 Replacement of parts and life

- Parts used in the product may experience performance degradation due to years of use.
- Regular replacement is recommended for long-term use of the instrument.
- Please contact your dealer or company service center for replacement.

# 7.4 Cleaning

When removing the dirt from the instrument and options, wipe it off with a soft cloth dampened with a small amount of water or a mild detergent. Wipe the display area gently with a soft, dry cloth.


# 7.5 Frequently asked questions

If it is confirmed that there is a fault, please check the following items. If there is no matching item, please contact the agent or the company service center.

Telephone: +86(0)755-8259 3440 Website: v

Technical support: info@hangzhicn.com Website: www.hangzhicn.com

No.	Item	Please chec	k	Possible reason → Action	
1-1	The power is not turned on (nothing is displayed)	Start button color	Not lit (extinguished)	Not powered → Please confirm the continuity of the power cord  Different power supply voltage and frequency → Please confirm the rated power value (AC220±20%; 50Hz/60Hz)	
1-2	Cannot perform touch panel operation	Icon display	Display number icon	Key locked → Please unlock the key	
1-3	PC cannot be displayed.			Please check whether R232C interface is loose	

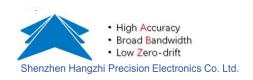

# Attachment 1 Communication agreement

Please refer to "HZP communication agreement".



# Attachment 2 PSM600 pulse constant comparison table

600A DC energy pulse constant comparison table (automatic)

		10V	20V	50V	100V	200V	500V	1000V
	0.2A	9.00×10 <sup>10</sup>	4.50×10 <sup>10</sup>	1.80×10 <sup>10</sup>	9.00×10 <sup>9</sup>	4.50×10 <sup>9</sup>	1.80×10 <sup>9</sup>	9.00×10 <sup>8</sup>
	0.4A	4.50×10 <sup>10</sup>	2.25×10 <sup>10</sup>	9.00×10 <sup>9</sup>	4.50×10 <sup>9</sup>	2.25×10 <sup>9</sup>	9.00×10 <sup>8</sup>	4.50×10 <sup>8</sup>
Small current	1A	1.80×10 <sup>10</sup>	9.00×10 <sup>9</sup>	3.60×10 <sup>9</sup>	1.80×10 <sup>9</sup>	9.00×10 <sup>8</sup>	3.60×10 <sup>8</sup>	1.80×10 <sup>8</sup>
Small current	2A	9.00×10 <sup>9</sup>	4.50×10 <sup>9</sup>	1.80×10 <sup>9</sup>	9.00×10 <sup>8</sup>	4.50×10 <sup>8</sup>	1.80×10 <sup>8</sup>	9.00×10 <sup>7</sup>
	4A	4.50×10 <sup>9</sup>	2.25×10 <sup>9</sup>	9.00×10 <sup>8</sup>	4.50×10 <sup>8</sup>	2.25×10 <sup>8</sup>	9.00×10 <sup>7</sup>	4.50×10 <sup>7</sup>
	10A	1.80×10 <sup>9</sup>	9.00×10 <sup>8</sup>	3.60×10 <sup>8</sup>	1.80×10 <sup>8</sup>	9.00×10 <sup>7</sup>	3.60×10 <sup>7</sup>	1.80×10 <sup>7</sup>
	12A	1.50×10 <sup>9</sup>	7.50×10 <sup>8</sup>	3.00×10 <sup>8</sup>	1.50×10 <sup>8</sup>	7.50×10 <sup>7</sup>	3.00×10 <sup>7</sup>	1.50×10 <sup>7</sup>
	24A	7.50×10 <sup>8</sup>	3.75×10 <sup>8</sup>	1.50×10 <sup>8</sup>	7.50×10 <sup>7</sup>	3.75×10 <sup>7</sup>	1.50×10 <sup>7</sup>	7.50×10 <sup>6</sup>
Hoove, ourront	60A	3.00×10 <sup>8</sup>	1.50×10 <sup>8</sup>	6.00×10 <sup>7</sup>	3.00×10 <sup>7</sup>	1.50×10 <sup>7</sup>	6.00×10 <sup>6</sup>	3.00×10 <sup>6</sup>
Heavy current	120A	1.50×10 <sup>8</sup>	7.50×10 <sup>7</sup>	3.00×10 <sup>7</sup>	1.50×10 <sup>7</sup>	7.50×10 <sup>6</sup>	3.00×10 <sup>6</sup>	1.50×10 <sup>6</sup>
	240A	7.50×10 <sup>7</sup>	3.75×10 <sup>7</sup>	1.50×10 <sup>7</sup>	7.50×10 <sup>6</sup>	3.75×10 <sup>6</sup>	1.50×10 <sup>6</sup>	7.50×10 <sup>5</sup>
	600A	3.00×10 <sup>7</sup>	1.50×10 <sup>7</sup>	6.00×10 <sup>6</sup>	3.00×10 <sup>6</sup>	1.50×10 <sup>6</sup>	6.00×10 <sup>5</sup>	3.00×10 <sup>5</sup>

Telephone: +86(0)755-8259 3440 Website: www

Technical support: info@hangzhicn.com Website: www.hangzhicn.com



## 424A AC energy pulse constant comparison table (automatic)

		7V	14V	35V	71V	141V	354V	707V
	0.13A	1.92×10 <sup>11</sup>	9.60×10 <sup>10</sup>	3.84×10 <sup>10</sup>	1.92×10 <sup>10</sup>	9.60×10 <sup>9</sup>	3.84×10 <sup>9</sup>	1.92×10 <sup>9</sup>
	0.28A	9.00×10 <sup>10</sup>	4.50×10 <sup>10</sup>	1.80×10 <sup>10</sup>	9.00×10 <sup>9</sup>	4.50×10 <sup>9</sup>	1.80×10 <sup>9</sup>	9.00×10 <sup>8</sup>
Small	0.7A	3.60×10 <sup>10</sup>	1.80×10 <sup>10</sup>	7.20×10 <sup>9</sup>	3.60×10 <sup>9</sup>	1.80×10 <sup>9</sup>	7.20×10 <sup>8</sup>	3.60×10 <sup>8</sup>
current	1.4A	1.80×10 <sup>10</sup>	9.50×10 <sup>9</sup>	3.60×10 <sup>9</sup>	1.80×10 <sup>9</sup>	9.50×10 <sup>8</sup>	3.60×10 <sup>8</sup>	1.80×10 <sup>8</sup>
	2.8A	9.00×10 <sup>9</sup>	4.50×10 <sup>9</sup>	1.80×10 <sup>9</sup>	9.00×10 <sup>8</sup>	4.50×10 <sup>8</sup>	1.80×10 <sup>8</sup>	9.00×10 <sup>7</sup>
	7A	3.60×10 <sup>9</sup>	1.80×10 <sup>9</sup>	7.20×10 <sup>8</sup>	3.60×10 <sup>8</sup>	1.80×10 <sup>8</sup>	7.20×10 <sup>7</sup>	3.60×10 <sup>7</sup>
	8A	3.20×10 <sup>9</sup>	1.60×10 <sup>9</sup>	6.40×10 <sup>8</sup>	3.20×10 <sup>8</sup>	1.60×10 <sup>8</sup>	6.40×10 <sup>7</sup>	3.20×10 <sup>7</sup>
	17A	1.50×10 <sup>9</sup>	7.50×10 <sup>8</sup>	3.00×10 <sup>8</sup>	1.50×10 <sup>8</sup>	7.50×10 <sup>7</sup>	3.00×10 <sup>7</sup>	1.50×10 <sup>7</sup>
Heavy	42A	6.00×10 <sup>8</sup>	3.00×10 <sup>8</sup>	1.20×10 <sup>8</sup>	6.00×10 <sup>7</sup>	3.00×10 <sup>7</sup>	1.20×10 <sup>7</sup>	6.00×10 <sup>6</sup>
current	85A	3.20×10 <sup>8</sup>	1.60×10 <sup>8</sup>	6.40×10 <sup>7</sup>	3.20×10 <sup>7</sup>	1.60×10 <sup>7</sup>	6.40×10 <sup>6</sup>	3.20×10 <sup>6</sup>
	170A	1.50×10 <sup>8</sup>	7.50×10 <sup>7</sup>	3.00×10 <sup>7</sup>	1.50×10 <sup>7</sup>	7.50×10 <sup>6</sup>	3.00×10 <sup>6</sup>	1.50×10 <sup>6</sup>
	424A	6.00×10 <sup>7</sup>	3.00×10 <sup>7</sup>	1.20×10 <sup>7</sup>	6.00×10 <sup>6</sup>	3.00×10 <sup>6</sup>	1.20×10 <sup>6</sup>	6.00×10 <sup>5</sup>



# Attachment 3 PSM1000 pulse constant comparison table

1000A DC energy pulse constant comparison table (automatic)

		10V	20V	50V	100V	200V	500V	1000V
	0.3A	6.00×10 <sup>10</sup>	3.00×10 <sup>10</sup>	1.20×10 <sup>10</sup>	6.00×10 <sup>9</sup>	3.00×10 <sup>9</sup>	1.20×10 <sup>9</sup>	6.00×10 <sup>8</sup>
	0.6A	3.00×10 <sup>10</sup>	1.50×10 <sup>10</sup>	6.00×10 <sup>9</sup>	3.00×10 <sup>9</sup>	1.50×10 <sup>9</sup>	6.00×10 <sup>8</sup>	3.00×10 <sup>8</sup>
	1.5A	1.20×10 <sup>10</sup>	6.00×10 <sup>9</sup>	2.40×10 <sup>9</sup>	1.20×10 <sup>9</sup>	6.00×10 <sup>8</sup>	2.40×10 <sup>8</sup>	1.20×10 <sup>8</sup>
Small current	ЗА	6.00×10 <sup>9</sup>	3.00×10 <sup>9</sup>	1.20×10 <sup>9</sup>	6.00×10 <sup>8</sup>	3.00×10 <sup>8</sup>	1.20×10 <sup>8</sup>	6.00×10 <sup>7</sup>
	6A	3.00×10 <sup>9</sup>	1.50×10 <sup>9</sup>	6.00×10 <sup>8</sup>	3.00×10 <sup>8</sup>	1.50×10 <sup>8</sup>	6.00×10 <sup>7</sup>	3.00×10 <sup>7</sup>
	15A	1.20×10 <sup>9</sup>	6.00×10 <sup>8</sup>	2.40×10 <sup>8</sup>	1.20×10 <sup>8</sup>	6.00×10 <sup>7</sup>	2.40×10 <sup>7</sup>	1.20×10 <sup>7</sup>
	16.7A	1.00×10 <sup>9</sup>	5.40×10 <sup>8</sup>	2.10×10 <sup>8</sup>	1.00×10 <sup>8</sup>	5.40×10 <sup>7</sup>	2.10×10 <sup>7</sup>	1.00×10 <sup>7</sup>
	18A	1.00×10 <sup>9</sup>	5.00×10 <sup>8</sup>	2.00×10 <sup>8</sup>	1.00×10 <sup>8</sup>	5.00×10 <sup>7</sup>	2.00×10 <sup>7</sup>	1.00×10 <sup>7</sup>
	36A	5.00×10 <sup>8</sup>	2.50×10 <sup>8</sup>	1.00×10 <sup>8</sup>	5.00×10 <sup>7</sup>	2.50×10 <sup>7</sup>	1.00×10 <sup>7</sup>	5.00×10 <sup>6</sup>
	90A	2.00×10 <sup>8</sup>	1.00×10 <sup>8</sup>	4.00×10 <sup>7</sup>	2.00×10 <sup>7</sup>	1.00×10 <sup>7</sup>	4.00×10 <sup>6</sup>	2.00×10 <sup>6</sup>
Heavy current	180A	1.00×10 <sup>9</sup>	5.00×10 <sup>7</sup>	2.00×10 <sup>7</sup>	1.00×10 <sup>7</sup>	5.00×10 <sup>6</sup>	2.00×10 <sup>6</sup>	1.00×10 <sup>6</sup>
	360A	5.00×10 <sup>7</sup>	2.50×10 <sup>7</sup>	1.00×10 <sup>7</sup>	5.00×10 <sup>6</sup>	2.50×10 <sup>6</sup>	1.00×10 <sup>6</sup>	5.00×10 <sup>5</sup>
	900A	2.00×10 <sup>7</sup>	1.00×10 <sup>7</sup>	4.00×10 <sup>6</sup>	2.00×10 <sup>6</sup>	1.00×10 <sup>6</sup>	4.00×10 <sup>5</sup>	2.00×10 <sup>5</sup>
	1000A	1.80×10 <sup>7</sup>	9.00×10 <sup>6</sup>	3.60×10 <sup>6</sup>	1.80×10 <sup>6</sup>	9.00×10 <sup>5</sup>	3.60×10 <sup>5</sup>	1.80×10 <sup>5</sup>

Telephone: +86(0)755-8259 3440 Website: www.hangzhicn.com



## 707A AC energy pulse constant comparison table (automatic)

		7V	14V	35V	71V	141V	354V	707V
Small current	0.2A	1.20×10 <sup>11</sup>	6.00×10 <sup>10</sup>	2.40×10 <sup>10</sup>	1.20×10 <sup>10</sup>	6.00×10 <sup>9</sup>	2.40×10 <sup>9</sup>	1.20×10 <sup>9</sup>
	0.4A	6.00×10 <sup>10</sup>	3.00×10 <sup>10</sup>	1.20×10 <sup>10</sup>	6.00×10 <sup>9</sup>	3.00×10 <sup>9</sup>	1.20×10 <sup>9</sup>	6.00×10 <sup>8</sup>
	1A	2.40×10 <sup>10</sup>	1.20×10 <sup>10</sup>	4.80×10 <sup>9</sup>	2.40×10 <sup>9</sup>	1.20×10 <sup>9</sup>	4.80×10 <sup>8</sup>	2.40×10 <sup>8</sup>
	2A	1.20×10 <sup>10</sup>	6.00×10 <sup>9</sup>	2.40×10 <sup>9</sup>	1.20×10 <sup>9</sup>	6.00×10 <sup>8</sup>	2.40×10 <sup>8</sup>	1.20×10 <sup>7</sup>
	4.2A	6.00×10 <sup>9</sup>	3.00×10 <sup>9</sup>	1.20×10 <sup>9</sup>	6.00×10 <sup>8</sup>	3.00×10 <sup>8</sup>	1.20×10 <sup>8</sup>	6.00×10 <sup>7</sup>
	10A	2.40×10 <sup>9</sup>	1.20×10 <sup>9</sup>	4.80×10 <sup>8</sup>	2.40×10 <sup>8</sup>	1.20×10 <sup>8</sup>	4.80×10 <sup>7</sup>	2.40×10 <sup>7</sup>
	12A	2.10×10 <sup>9</sup>	1.00×10 <sup>9</sup>	4.30×10 <sup>8</sup>	2.10×10 <sup>8</sup>	1.00×10 <sup>8</sup>	4.30×10 <sup>7</sup>	2.10×10 <sup>7</sup>
Heavy current	13A	2.00×10 <sup>9</sup>	1.00×10 <sup>9</sup>	4.00×10 <sup>8</sup>	2.00×10 <sup>8</sup>	1.00×10 <sup>8</sup>	4.00×10 <sup>7</sup>	2.00×10 <sup>7</sup>
	25A	1.00×10 <sup>9</sup>	5.00×10 <sup>8</sup>	2.00×10 <sup>8</sup>	1.00×10 <sup>8</sup>	5.00×10 <sup>7</sup>	2.00×10 <sup>7</sup>	1.00×10 <sup>7</sup>
	64A	4.00×10 <sup>8</sup>	2.00×10 <sup>8</sup>	8.00×10 <sup>7</sup>	4.00×10 <sup>7</sup>	2.00×10 <sup>7</sup>	8.00×10 <sup>6</sup>	4.00×10 <sup>6</sup>
	127A	2.00×10 <sup>8</sup>	1.00×10 <sup>8</sup>	4.00×10 <sup>7</sup>	2.00×10 <sup>7</sup>	1.00×10 <sup>7</sup>	4.00×10 <sup>6</sup>	2.00×10 <sup>6</sup>
	255A	1.00×10 <sup>8</sup>	5.00×10 <sup>7</sup>	2.00×10 <sup>7</sup>	1.00×10 <sup>7</sup>	5.00×10 <sup>6</sup>	2.00×10 <sup>6</sup>	1.00×10 <sup>6</sup>
	636A	4.00×10 <sup>7</sup>	2.00×10 <sup>7</sup>	8.00×10 <sup>6</sup>	4.00×10 <sup>6</sup>	2.00×10 <sup>6</sup>	8.00×10 <sup>5</sup>	4.00×10 <sup>5</sup>
	707A	3.60×10 <sup>7</sup>	1.80×10 <sup>7</sup>	7.20×10 <sup>6</sup>	3.60×10 <sup>6</sup>	1.80×10 <sup>6</sup>	7.20×10 <sup>5</sup>	3.60×10 <sup>5</sup>

Telephone: +86(0)755-8259 3440 Website: www.hangzhicn.com



# Attachment 4 PSM1500 pulse constant comparison table

## 1500A DC energy pulse constant comparison table (automatic)

	37			,	
	80V	160V	320V	800V	1000V
100A	3.60×10 <sup>7</sup>	1.80×10 <sup>7</sup>	9.00×10 <sup>6</sup>	3.60×10 <sup>6</sup>	1.80×10 <sup>6</sup>
200A	1.80×10 <sup>7</sup>	9.00×10 <sup>6</sup>	4.50×10 <sup>6</sup>	1.80×10 <sup>6</sup>	9.00×10 <sup>5</sup>
400A	9.00×10 <sup>6</sup>	4.50×10 <sup>6</sup>	2.25×10 <sup>6</sup>	9.00×10 <sup>5</sup>	4.50×10 <sup>5</sup>
1000A	3.60×10 <sup>6</sup>	1.80×10 <sup>6</sup>	9.00×10 <sup>5</sup>	3.60×10 <sup>5</sup>	1.80×10 <sup>5</sup>
1500A	2.40×10 <sup>6</sup>	1.20×10 <sup>6</sup>	6.00×10 <sup>5</sup>	2.40×10 <sup>5</sup>	1.20×10 <sup>5</sup>

### 1000A AC energy pulse constant comparison table (automatic)

recent to energy parce constant companion table (automatic)						
	71V	141V	283V	707V	1061V	
71A	7.20×10 <sup>7</sup>	3.60×10 <sup>7</sup>	1.80×10 <sup>7</sup>	7.20×10 <sup>6</sup>	3.60×10 <sup>6</sup>	
141A	3.70×10 <sup>7</sup>	1.80×10 <sup>7</sup>	9.10×10 <sup>6</sup>	3.60×10 <sup>6</sup>	1.80×10 <sup>6</sup>	
283A	1.80×10 <sup>7</sup>	9.00×10 <sup>6</sup>	4.50×10 <sup>6</sup>	1.80×10 <sup>6</sup>	9.00×10 <sup>5</sup>	
707A	7.30×10 <sup>6</sup>	3.60×10 <sup>6</sup>	1.80×10 <sup>6</sup>	7.20×10 <sup>5</sup>	3.60×10⁵	
1061A	4.90×10 <sup>6</sup>	2.40×10 <sup>6</sup>	1.20×10 <sup>6</sup>	4.80×10 <sup>5</sup>	2.40×10 <sup>5</sup>	